

Panasonic CF-61, CF-62 Series


The **Panasonic CF-61 Series** comes standard with 16Mb of memory soldered. It can be expanded to a maximum of 80Mb by installing one of the following Viking Components memory options to its one available expansion slot.

The **Panasonic CF-62 Series** comes standard with 8Mb or 16Mb of memory soldered. It can be expanded to a maximum of 40Mb or 48Mb by installing the following Viking Components memory options in its one available expansion slot.

Description

Viking P/N

8Mb EDO Memory Module	P6108, RP6108
16Mb EDO Memory Module	P6116, RP6116
32Mb EDO Memory Module	P6132, RP6132
64Mb EDO Memory Module	P6164, RP6164

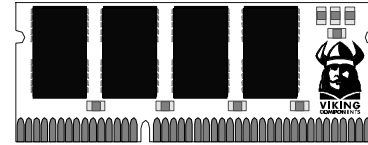

⚠ Caution:


Electro Static Discharge (ESD) can damage electronic components. Before touching the memory module, ensure that you are discharged of static electricity by touching a grounded metal object.

INSTALLATION INSTRUCTIONS:


1. Turn the computer off and disconnect the AC power supply and any other cables from the unit.

Note: If the unit appears to be powered down, ensure that it is not in Suspend mode.


2. Facing the front of the computer, locate the battery on the right-side corner closest to you. Locate its connected release tab also on the same corner. Next locate the battery locking tab below the release tab. Push the locking tab down and slide the release tab to the right. Pull the battery completely out of its compartment.

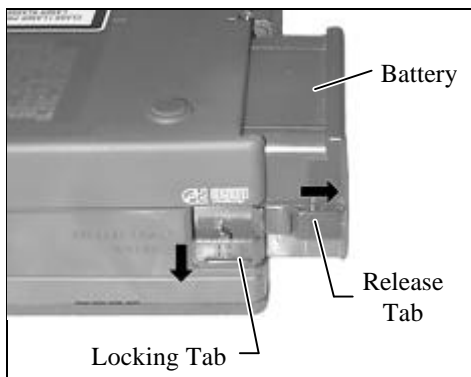


3. Locate the multimedia pocket/floppy disk drive on the left bottom panel corner closest to you. Also locate its locking panel towards the left-top corner of the front panel. Locate the release button at the center of this panel. Push the release button in and slide the locking panel to the left.

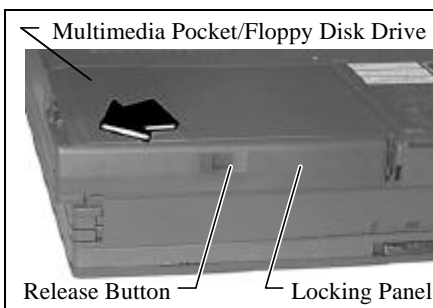


4. Remove the multimedia pocket/floppy disk drive by lifting it upwards by the locking panel side.

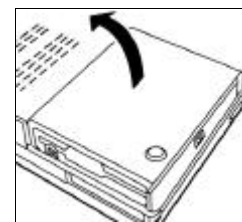


5. Locate the metallic cover next to the multimedia pocket/floppy disk drive connector. Gently lift it upwards by the edge closest to the connector.

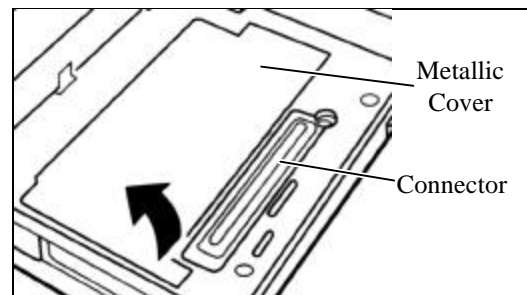

6. Locate the memory expansion slot underneath the metallic cover. Also notice the position of the off-center key on the expansion slot.

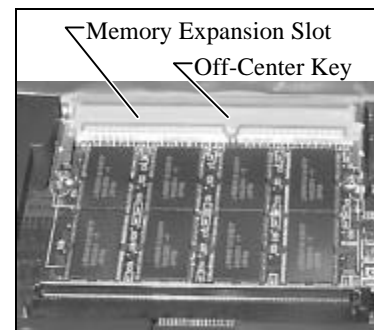

7. To install a memory module, insert the module into the expansion slot at an angle and then push it down until it clicks into place. To be certain that the module is installed correctly, ensure that the off-center notch on the module is aligned with the off-center key of the expansion slot. The module can only be installed one way due to the position of the notch.

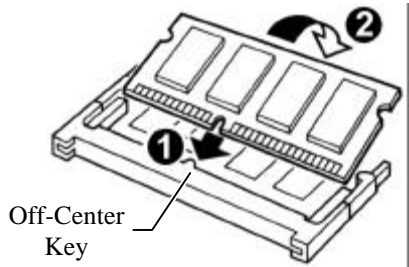

8. Replace the metallic cover back to its original position.
9. Replace the multimedia pocket/floppy disk drive back into its compartment, with the edge opposite of the locking panel inserted first. Then slide the locking panel completely to the right, to its locked position.
10. Replace the battery back into its compartment.
11. Turn the computer right-side up. Replace the AC power supply and any other cables you may have disconnected.
12. Open the display screen and turn the computer on. Your system will automatically reconfigure itself to recognize the newly added memory. The new memory can be verified during the POST routine at startup and at the SETUP utility.

The installation is now complete.

