


Viking Memory

INSTALLATION GUIDE

CTX®

EzBook 800 Series

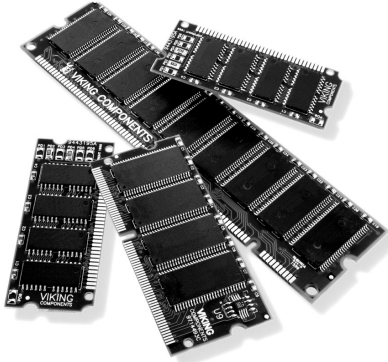


Manual No. 1005255 • Release 07/98, Rev. A

SPEED POWER PERFORMANCE

The CTX EzBook 800 Series comes standard with 32MB of removable memory. It can be expanded to a maximum of 256MB* by installing the following Viking Components memory options into its two available expansion slots.

Description	Viking P/N
16MB EDO Memory Module	CTX800/16, RCTX800/16
32MB EDO Memory Module	CTX800/32, RCTX800/32
64MB EDO Memory Module	CTX800/64, RCTX800/64
128MB EDO Memory Module	CTX800/128, RCTX800/128

*Requires removal of the standard memory module.

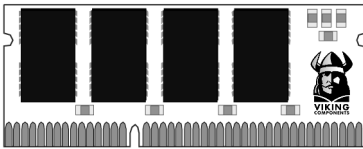


Caution:

Electro Static Discharge (ESD) can damage electronic components. Before touching the memory module, ensure that you are discharged of static electricity by touching a grounded metal object.

INSTALLATION INSTRUCTIONS:

1. Turn the computer off and disconnect the AC power supply and any other cables from the unit.

Note: If the unit appears to be powered down, ensure that it is not in Suspend mode.

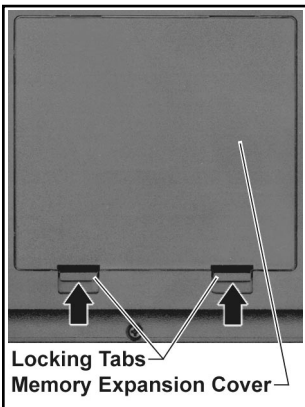


2. Turn the computer upside-down. Remove the battery from the system. If you are not familiar with this procedure, please refer to your computer's "Owner's Manual."


3. Facing the front of the computer, locate the memory expansion cover on the right-side of the bottom panel. Also locate the two locking tabs on the edge of the expansion cover closest to the front panel of the system. Press the tabs simultaneously toward the expansion cover and then lift the cover up to remove it.

4. Locate the two memory expansion slots in the open compartment. Also notice the location of the off-center keys on each of the expansion slots. There will also be a standard memory module occupying one of the expansion slots.

Note: Memory module can be installed in any combination.

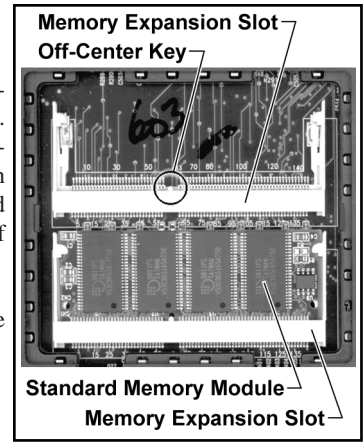


5. To upgrade your system past 160MB, the standard memory module will need to be removed. If you do not need to remove a memory module, please proceed to step 6.

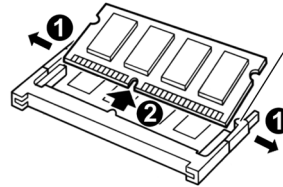

Retaining Clip

To remove a memory module, locate the retaining clips on both sides of the memory module. Gently pull both clips away from the module. Then lift the module out of its expansion slot.

6. To install a memory module, insert the module into an available expansion slot at an angle and then push it down until it clicks into place. To be certain that the module is installed correctly, ensure that the off-center notch on the module is aligned with the off-center key of the expansion slot. The module can only be installed one way due to the position of the notch.

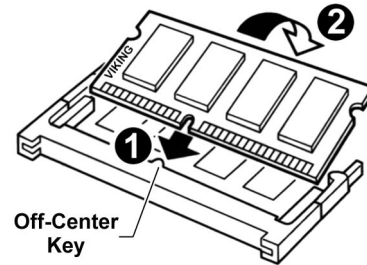

Off-Center Key

7. Replace the memory expansion covers back to its original position.
8. Insert the battery back into its compartment and turn the system right-side up.
9. Replace the AC power supply and any other cables you may have disconnected.
10. Open the display screen and turn the system on. The computer will automatically reconfigure itself to recognize the additional memory. The new memory can be verified during the POST routine at start-up and at the SETUP utility.

The installation is now complete.